


SAREGAMA  
**CARVAAN**<sup>®</sup>  
— MUSICBAR —

**USER MANUAL**



MORE THAN <sup>just</sup> A SOUNDBAR

## TOP VIEW: BUTTONS ON CARVAAN MUSICBAR

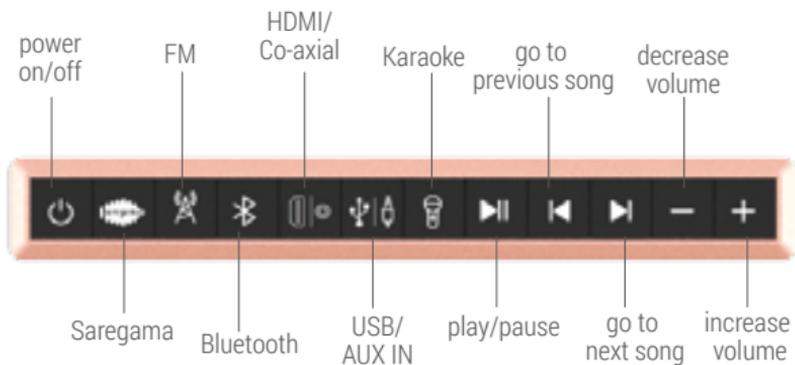

### SET UP PROCESS

#### POWER ON THE DEVICE

To power on and enjoy the Carvaan Musicbar follow the steps below:

1. Connect the Power Adapter to the wall plug and the other end to "DC in" port on the back panel of the device
2. Switch on the power from wall plug
3. Click on the "Power" button on the top panel of the device/remote to power it on
4. Enjoy your music on the Carvaan Musicbar



#### Note:

1. Use supplied power adapter only
2. The device requires to be connected to AC power with the bundled adapter at all times for operation
3. When device is connected to a power source, the power button on the device panel is backlit in red colour

## MODES

To choose a mode, press the corresponding mode button on the top panel of the device/remote

When the device is powered on and a mode is selected, the power button and mode button on the device are backlit in green and blue colour respectively

### SAREGAMA

1000 pre-loaded evergreen songs by legends like Kishore Kumar, Lata Mangeshkar, Asha Bhosle, Mohammed Rafi and Mukesh; this is the default mode on first power on / reset

Press 'Next/Previous' button on remote/unit for 3-4 seconds to move 10 songs forward/backward respectively

### FM

Listen to local FM stations. To tune to FM, press FM mode button  
To auto tune FM stations, follow the steps:

**Step 1:** Press play/pause button for 3-4 seconds

**Step 2:** Searching for all FM signals will start. You will hear a searching sound and each FM station will play for approx. 3-4 seconds till all stations are tuned

**Step 3:** Press next/previous button to go to next/previous station

**FM frequency:** 87.5 to 108 MHz

FM reception varies across locations and Carvaan models.

*Note: It is recommended that the loose end of the connected antenna is placed near a window for improved FM reception*



### BLUETOOTH\*

Pair your mobile phone/tablet with the Carvaan Musicbar. Enjoy songs stored on your personal mobile phone/tablet on the device

*\*support for Bluetooth v5.0*

## KARAOKE

Use the mic to sing along while using the Karaoke mode on Carvaan Musicbar. Karaoke mode works along with all other modes.

To connect the mic and Carvaan Musicbar, follow the steps below:

- Insert 2 AA batteries in the battery compartment
  - Turn on the mic by sliding the button upwards
  - Press Karaoke mode button on the unit/ remote
- Note - mic will connect automatically to the unit in 5-10 seconds
- Tap on mic to check if the mic and unit are connected
  - Enjoy singing your favorite tracks

\*You can use both the mic simultaneously to enjoy duet singing



To replace the mic battery:

- Open the battery compartment
- Insert fresh AA batteries with the correct polarity (-/+)
- Close the battery compartment
- Discard the used battery

To use Karaoke on your phone via Bluetooth / Aux:

- Connect your phone & the unit via the desired mode (Bluetooth or Aux cable)
- Press Karaoke mode button on the unit / remote (ensure unit & mic are connected, detailed above)
- Go to YouTube app / [www.youtube.com](http://www.youtube.com) on your phone. Search your favourite song & start singing

To use Karaoke on your TV via Aux / HDMI / Co-axial:

- Connect your TV & the unit via the desired mode (HDMI / Co-axial / Aux cable)
- Press Karaoke mode button on the unit / remote (ensure unit & mic are connected, detailed above)
- Go to YouTube app / [www.youtube.com](http://www.youtube.com) on your TV. Search your favourite song & start singing

You can also use Karaoke in Saregama , FM or USB mode in the same way as mentioned above

## KARAOKE MODES

This offers you a perfect setting for your karaoke track & voice

To set, press the corresponding mode button on the remote

**BALANCE:** The Karaoke track & your voice are balanced at the same level

**VOCAL:** Your voice will be louder than the Karaoke track

**MUSIC:** The Karaoke track will be louder than your voice

## **USB\*\* / AUX IN**

a. Press the USB/AUX button on the unit to switch between USB and AUX mode  
OR

Press USB or AUX mode button on the remote to activate respective modes

b. Plug in a USB into the USB port on the back panel of Carvaan Musicbar to enjoy your personal collection of songs

c. You can also connect an Aux cable in the Aux IN port on the back panel of the device to play songs from your phone / tablet / TV / laptop

USB is the default mode on first power on / reset

*\*\*support for USB 3.0*

*\*\*supports USB pendrive upto 32 GB*

## CONNECT CARVAAN MUSICBAR TO YOUR TV

### **HDMI\*\*\* / CO-AXIAL**

The most preferred way to connect Musicbar & TV is HDMI



*\*\*\*Supports HDMI ARC only*

Press the HDMI /Co-axial button on the unit to switch between HDMI and Co-axial mode

OR

Press HDMI or Co-axial mode button on the remote to activate respective modes

HDMI is the default mode on first power on / reset

To connect the Carvaan Musicbar to TV via HDMI

- Press the HDMI mode button on the unit / remote
- Plug one end of the HDMI cable to HDMI (ARC) port on the TV and the other end to the HDMI port on the back panel of the device
- Turn on the TV

In case the TV is not compatible with HDMI Audio Return Channel (ARC), connect a Co-Axial cable from the TV to the device to enjoy the TV sound output on device speakers


- Press the Co-axial mode button on the unit / remote
- Connect the Co-Axial cable to the back panel of device and the audio out port on TV
- Turn on the TV

*Note: Your TV Audio Settings need to set to 'External Speakers' and disable TV speakers*

## FRONT VIEW



## PORTS ON THE BACK PANEL

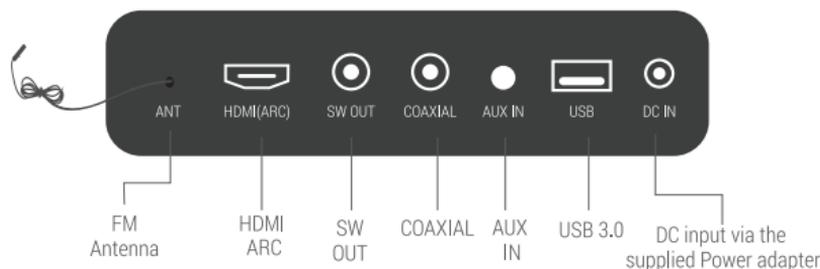

**BASS:** Increase / decrease the volume of the base / low frequency notes

**TREBLE:** Increase / decrease the volume of the treble / high frequency notes

## AUDIO MODES

To set an audio mode, press the corresponding mode button on the remote

**MUSIC:** Create a musical concert like experience while playing your favourite songs

**MOVIE:** Enjoy a true cinematic effect while watching a movie

**NEWS:** Hear your TV programs and news anchors – loud, crisp and clear


**3D:** Play games / watch sports in a stadium like environment

## SAREGAMA CARVAAN APP

Download “Saregama Carvaan App” from the Apple/ Android store. Use the app to browse through the collection of songs available on Carvaan Musicbar. You can even search for a song or create playlists of songs you would like to enjoy on Carvaan Musicbar



Refer to the enclosed insert for steps on how to connect the app and Carvaan Musicbar unit.

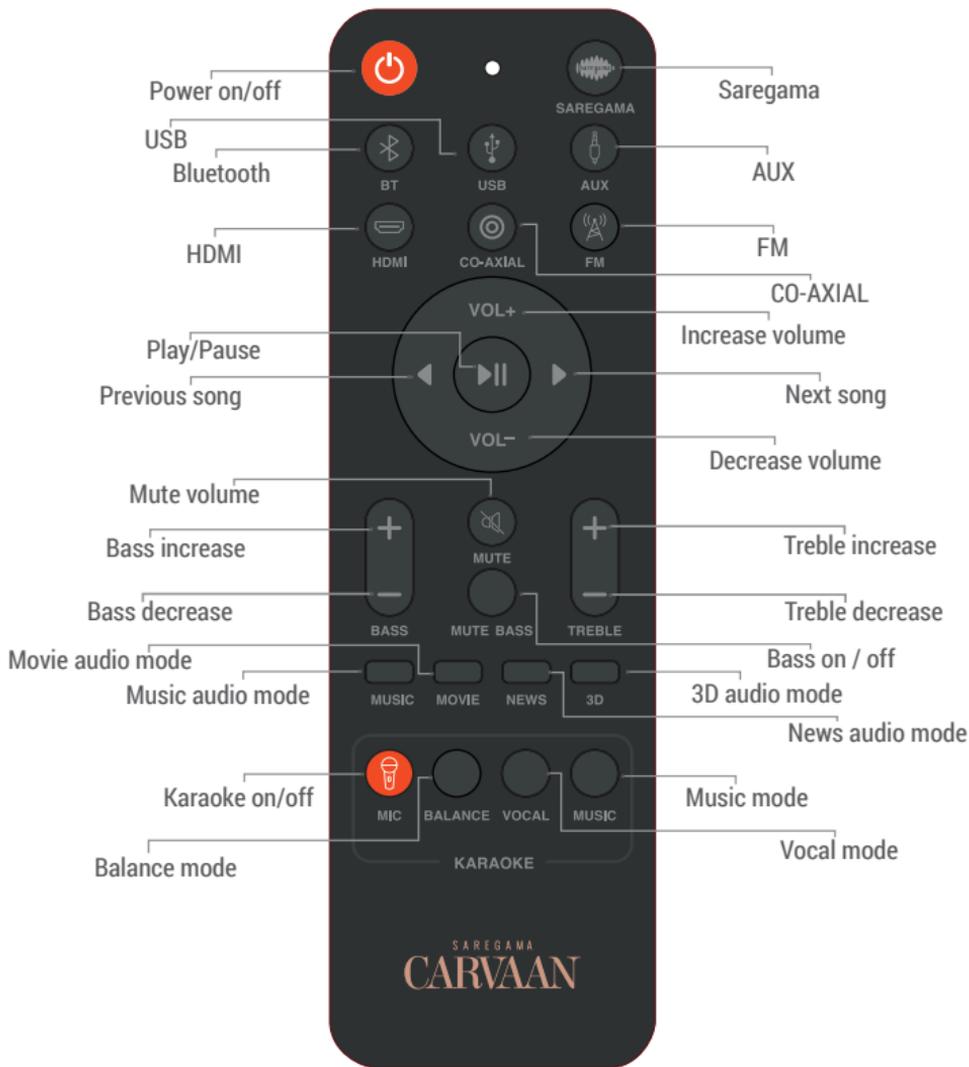

## RESET CARVAAN MUSICBAR

- a. Power on your Carvaan Musicbar
- b. Press the USB/AUX button on the unit for 3-4 seconds
- c. Your Carvaan Musicbar is reset to its original factory settings. All saved FM stations will be erased

## SAFETY HANDLING

### 1. CARE FOR PRODUCT (MUSICBAR & SUB-WOOFER)

- a. Keep the product away from dust and excessive heat (heat registers, stoves etc).
- b. Prevent spillage of water/any other liquid as this can cause failure of the product or could prove to be a potential fire hazard
- c. Clean the unit with a dry cloth only
- d. Do not walk on or pinch the power cord close to the plug
- e. Do not use a different brand of power supply cable, use the bundled power supply cable only
- f. Remove the remote battery when it is not used for longer duration
- g. Do not mix different brands or types of batteries in the remote
- h. Turn off the power source when not in use

### 2. OTHERS

- a. Use attachments/accessories as specified by the manufacturer
- b. Please contact an authorized service center for any repair/ servicing requirements or call the toll free no. 1800-102-7799 Or Whatsapp on 8657499000 for any queries

## IMPORTANT LINKS

**Song List & Detailed Warranty:**

[www.saregama.com/musicbar](http://www.saregama.com/musicbar)

## WARRANTY OVERVIEW

Carvaan Musicbar comes with a 1 year Warranty on all parts, excluding accessories. This includes servicing / repair or replacement of non-functional parts. The warranty does not apply and does not cover the following:

- Liability for loss of data/content loaded in the product due to misuse or tampering.
- Damage caused due to force majeure events; events caused by fire, water, electrical disturbances etc.; events beyond the control of Saregama; acts of negligence or mishandling; usage for commercial, business, industrial, educational, or rental purposes

## WARRANTY TYPE

Home service and Pick-up warranty are provided. Home service warranty requires customers to have a technician visit their home and service the product. This type of warranty can be availed by customers in locations where there is an authorised service technician available. Pick-up warranty service requires that the product along with the original invoice to be picked up from customer's location, at sole cost and responsibility of the company.

Once the Product is serviced/repaired/replaced, the company shall be responsible to deliver the product back to the customer.

 Waste electrical products should not be disposed of with household waste. Please follow disposal and recycling instructions issued by the concerned local authority.

## WARRANTY CARD

Customer's Name: \_\_\_\_\_

Customer's Address: \_\_\_\_\_

\_\_\_\_\_

Product Serial No.: \_\_\_\_\_ Date of Purchase: \_\_\_\_\_

Expiry Date: \_\_\_\_\_

I accept the terms and conditions of the warranty.

Retailer's Name: \_\_\_\_\_

Retailer's Signature/Seal: \_\_\_\_\_

\_\_\_\_\_  
Customer's Signature



## SAREGAMA INDIA LIMITED

FOR FEEDBACK/COMPLAINTS WRITE TO SAREGAMA INDIA LIMITED

 1800 102 7799 (9:00 AM TO 9:00PM) |  [FEEDBACK@SAREGAMA.COM](mailto:FEEDBACK@SAREGAMA.COM) |  8657499000