


SAREGAMA
CARVAAN[®]
— MUSICBAR —

USER MANUAL



MORE THAN ^{just} A SOUNDBAR

TOP VIEW: BUTTONS ON CARVAAN MUSICBAR

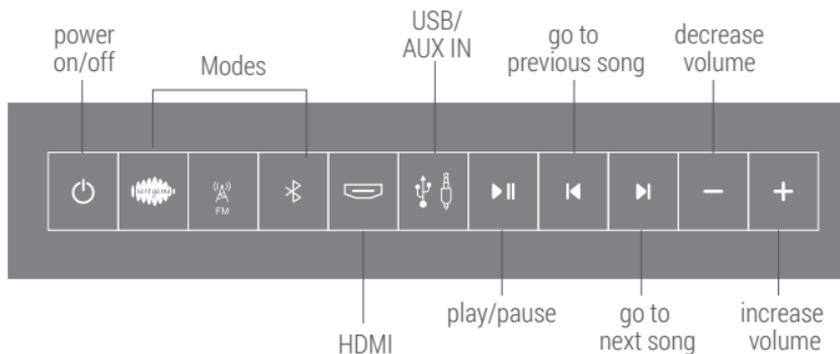


SET UP PROCESS

POWER ON THE DEVICE

To power on and enjoy the Carvaan Musicbar follow the steps below:

1. Connect the Power Adapter to the wall plug and the other end to "DC in" port on the back panel of the device
2. Switch on the power from wall plug
3. Click on the "Power" button on the top panel of the device/remote to power it on
4. Enjoy your music on the Carvaan Musicbar

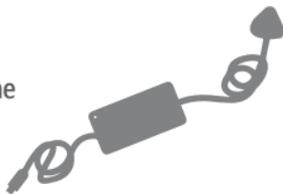

Note:

1. Use supplied power adapter only
2. The device requires to be connected to AC power with the bundled adapter at all times for operation
3. When device is powered on, the power button on the device panel is backlit in red colour
4. When the device is powered on and a mode is selected, the power button and mode button on the device are backlit in green and blue colour respectively

MUSIC MODES

All the music modes work on the Carvaan Musicbar irrespective of it being connected to TV.

To choose a music mode, press the corresponding mode button on the top panel of the device/remote

When the device is powered on and a mode is selected, the power button and mode button on the device are backlit in green and blue colour respectively

SAREGAMA

500 pre-loaded evergreen songs by legends like Kishore Kumar, Lata Mangeshkar, Asha Bhosle, Mohammed Rafi and Mukesh; this is the default mode on first power on

FM

Listen to local FM stations. To tune to FM, press FM mode button
To auto tune FM stations, follow the steps:

Step 1: Press play/pause button for 5 seconds

Step 2: Searching for all FM signals will start. You will hear a searching sound and each FM station will play for approx. 3-4 seconds till all stations are tuned

Step 3: Press next/previous button to go to next/previous station

FM frequency: 87.5 to 108 MHZ

Note: It is recommended that the loose end of the connected antenna is placed near a window for improved FM reception



BLUETOOTH*

Pair your mobile phone/tablet with the Carvaan Musicbar. Enjoy songs stored on your personal mobile phone/tablet on the device

**support for Bluetooth v5.0*

USB / AUX IN**

1. Plug in a USB into the USB port on the back panel of Carvaan Musicbar to enjoy your personal collection of songs
2. You can also connect an Aux cable in the Aux IN port on the back panel of the device to play songs from your phone/tablet
3. You can connect a Co-Axial cable on the back panel of device to TV to enjoy sound output on device speakers
4. Press the mode button to switch between USB, Aux In and Co-Axial output

***support for USB 3.0*


***supports USB pendrive upto 32 GB*

CONNECT CARVAAN MUSICBAR TO YOUR TV

Connect your TV to the device using the HDMI cable to enjoy the audio output of any movie, webseries or programme playing on TV on the Carvaan Musicbar.

HDMI***

The most preferred way to connect Musicbar & TV is HDMI

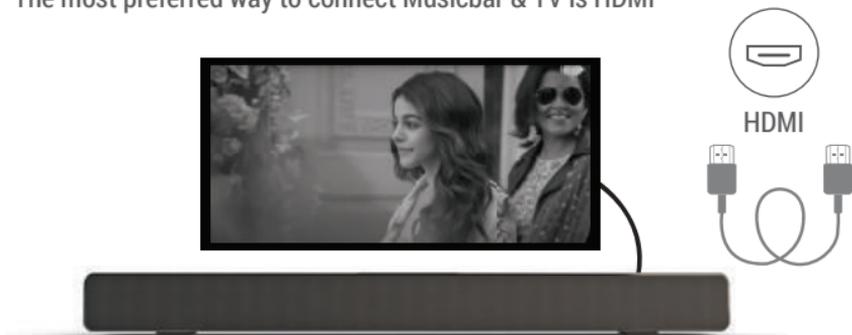

****Supports HDMI ARC only*

To connect the Carvaan Musicbar to TV

1. Plug one end of the HDMI cable to HDMI (ARC) port on the TV and the other end to the HDMI port on the back panel of the device
2. Turn on the TV
3. Press the HDMI button on the device/remote to switch to HDMI mode
4. Enjoy the TV audio on the Carvaan Musicbar
5. If the device is on any mode other than HDMI, press the HDMI button on device/remote to switch to HDMI mode


CO-AXIAL

In case the TV is not compatible with HDMI Audio Return Channel (ARC), connect a Co-Axial cable from the TV to the device to enjoy the TV sound output on device speakers

1. Connect the Co-Axial cable to the back panel of device and the audio out port on TV
2. Turn on the TV
3. Press the USB/Aux/HDMI button on remote to switch to Co-Axial mode

Note: Your TV Audio Settings need to set to 'External Speakers' and disable TV speakers


FRONT VIEW

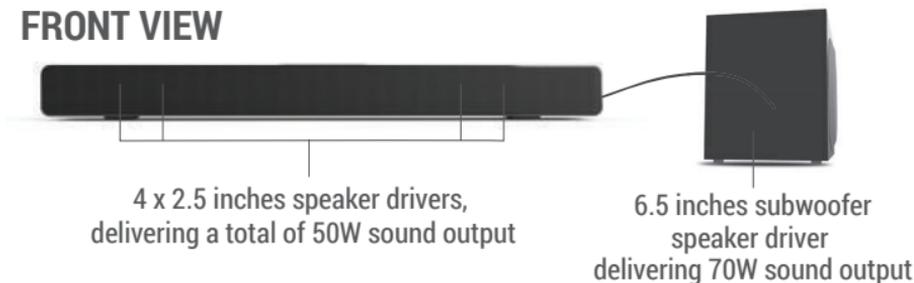

CONNECT SUBWOOFER TO CARVAAN MUSICBAR

The subwoofer comes with an attached Co-Axial cable, plug the loose end to the Co-Axial out port on the back panel of the Carvaan Musicbar

PORTS ON THE BACK PANEL

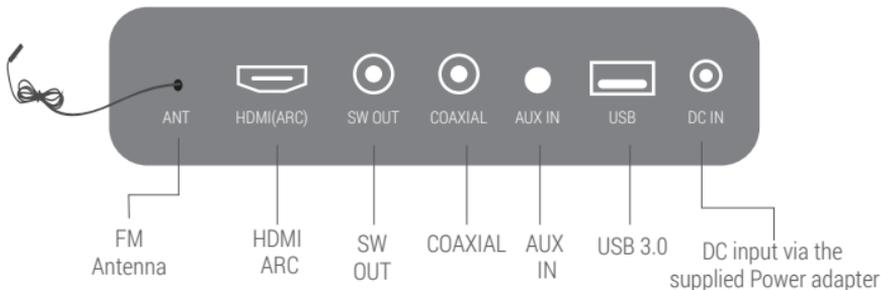

REMOTE



BASS: Increase / decrease the volume of the base / low frequency notes
TREBLE: Increase / decrease the volume of the treble / high frequency notes

AUDIO MODES

To set an audio mode, press the corresponding mode button on the remote

MUSIC: Create a musical concert like experience while playing your favourite songs

MOVIE: Enjoy a true cinematic effect while watching a movie


VOCAL: Hear your TV programs and news anchors – loud, crisp and clear

3D: Play games / watch sports in a stadium like environment

HOW TO REPLACE BATTERY IN REMOTE

To replace the remote control battery:

1. Open the battery compartment
2. Insert a fresh CR2025 battery with the correct polarity (-/+)
3. Close the battery compartment
4. Discard the used battery

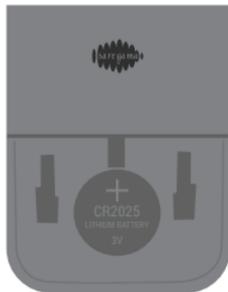

HOW TO RESET CARVAAN MUSICBAR

If you want to reset your Carvaan Musicbar, follow the steps below:

1. Power on your Carvaan Musicbar
2. Press the HDMI/USB/AUX button on the remote for 3-4 seconds
3. Your Carvaan Musicbar is reset to its original factory settings. All Bluetooth device connections and saved FM stations will be erased

SAFETY HANDLING

1. CARE FOR PRODUCT (CARVAAN MUSICBAR & SUBWOOFER)

- a. Keep the product away from dust and excessive heat (heat registers, stoves etc.)
- b. Prevent spillage of water/any other liquid as this can cause failure of the product or could prove to be a potential fire hazard
- c. Clean the unit with a dry cloth only
- d. Do not walk on or pinch the power cord close to the plug
- e. Do not use a different brand of power supply cable, use the

bundled power supply cable only

- f. Use only the bundled subwoofer with the Carvaan Musicbar
- g. Do not use the subwoofer with any other soundbar
- h. Remove the remote battery when it is not used for longer duration
- i. Do not mix different brands or types of batteries in the remote
- j. Turn off the power source when not in use

2. OTHERS

- a. Use attachments/accessories as specified by the manufacturer
- b. Please contact an authorized service center for any repair/ servicing requirements or call the toll free no. 1800-102-7799 for any queries

WARRANTY OVERVIEW

Carvaan Musicbar comes with a 1 year Warranty on all parts, excluding accessories. This includes servicing / repair or replacement of damaged parts. The warranty does not apply and does not cover the following:

- Liability for loss of data/content loaded in the product due to misuse or tampering.
- Damage caused due to force majeure events; events caused by fire, water, electrical disturbances etc.; events beyond the control of Saregama; acts of negligence or mishandling; usage for commercial, business, industrial, educational, or rental purposes

WARRANTY TYPE

Home service and Pick-up warranty are provided. Home service warranty requires customers to have a technician visit their home and service the product. This type of warranty can be availed by customers in locations where there is an authorised service technician available. Pick-up warranty service requires that the product along with the original invoice to be picked up from customer's location, at sole cost and responsibility of the company.

Once the Product is serviced/repaired/replaced, the company shall be responsible to deliver the product back to the customer.



Waste electrical products should not be disposed of with household waste. Please follow disposal and recycling instructions issued by the concerned local authority.

IMPORTANT LINKS

Song List:

www.saregama.com/carvaanmusicbar/songlist

Detailed Warranty:

www.saregama.com/carvaanmusicbar/warranty

WARRANTY CARD

Customer's Name: _____

Customer's Address: _____

Product Serial No.: _____ Date of Purchase: _____

Expiry Date: _____

I accept the terms and conditions of the warranty.

Retailer's Name: _____

Retailer's Signature/Seal: _____

Customer's Signature



Saregama India Limited

2nd Floor, Spencer Building, 30 Forjett Street,
Near Bhatia Hospital, Grant Road (W), Mumbai - 400036.

 /saregama

 /saregama

 /saregamaglobal

 /saregama_official

www.saregama.com